

1

Power ON / OFF



2



Connect with the App

3



Select and playback Elmoji™'s animations.



Long press both buttons for 5 seconds to switch between Elmoji™ and COJI™.



Non App Mode



App Mode!



Freeplay

Drive Mode

Memory Match

Mystery Maze

Music Maker



Included Apps:



TM and © 2017 Sesame Workshop.

For additional information, check out the Elmoji™ App or go online to:
www.wowwee.com/elmoji

2802US01TOP_QSG